


# XHP15

## HVAC bactericidal sanitising lamp with photoinitiator

- cod. ACC600094

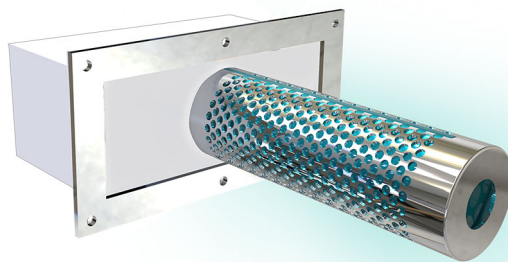

## DESCRIPTION

The "XHP15" lamp is characterised by the innovative process of air purification, as a result of the effect of UVC light combined with the principle of photocatalysis.

Titanium dioxide ( $\text{TiO}_2$ ) is the photoinitiator present in the lamp and is activated by UVC rays, creating a reaction of transformation of the oxygen and humidity present in the air into superoxide ions and hydroxide ions.

The process generates oxidants that are harmless to humans, animals and plants.

The production of antioxidants aims to inhibit viruses, moulds and bacteria present in the air.

Use of the UVC lamp with photocatalytic structure is to sterilise the air flow in the ducts of the HVAC systems, in the air conditioning systems, in the heat recovery systems and in the ducts of the MVHR systems.

## TECHNICAL SPECIFICATIONS:


- Power supply 230V - 50Hz
- Power consumption 6 W
- Titanium dioxide ( $\text{TiO}_2$ ) photoinitiator
- Operating range 1,000 - 1,500  $\text{m}^3/\text{h}$
- 9,000 working hours
- Dimensions: L 170 x H 85 x D 235 mm
- Recommended maximum surface area 150  $\text{m}^2$
- Wavelength 254 nm
- Effective irradiance: without grille 1.8  $\text{W}/\text{m}^2$  - with grille 0.03  $\text{W}/\text{m}^2$

## IDEAL FOR:

Installation in new and existing systems


Residential, commercial, industrial MVHR systems  
Residential, commercial, industrial HVAC systems  
Air conditioning systems  
Ventilation systems  
Air handling unit (AHU)  
Distribution or air connection plenum  
Air distribution duct

## MAIN PARTS

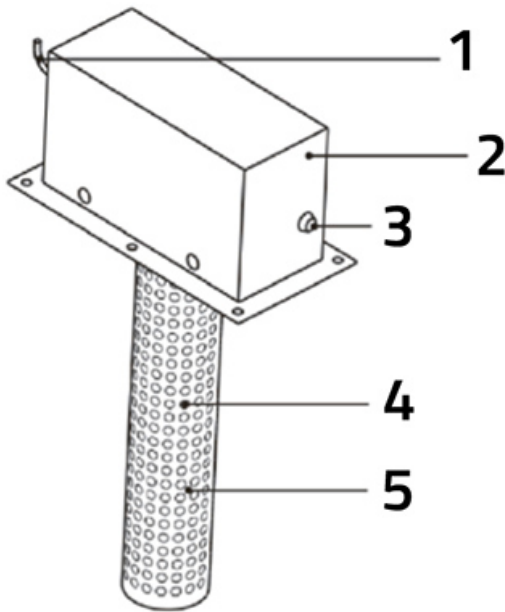

- [1] Power cable
- [2] Electrical box
- [3] ON/OFF UV indicator light
- [4] UV lamp
- [5] Photocatalyser

## DRILLING TEMPLATE

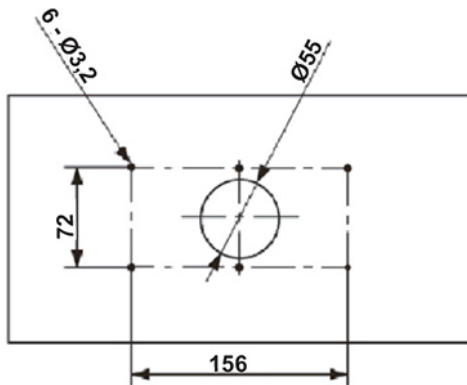

The lamp has a lifetime of 9,000 hours or two years after installation. After installation, the lamp loses its effectiveness and needs to be replaced.

The lamp does not have counters to indicate the working hours carried out, it must be programmed to change according to the working time.

Under some representative data:

- For use up to 12 hours a day: 2 years
- For use up to 16 hours a day: 1 year and a half
- For use up to 24 hours a day: 1 year

N.B. The entire device shall be replaced and not parts thereof

## ITEMS

| CODE      | DESCRIPTION                                          |
|-----------|------------------------------------------------------|
| ACC600094 | BACTERICIDE SANITISING LAMP WITH PHOTOCATALYST XHP15 |

All rights relating to this publication are the exclusive property of Tecnosystemi SpA.  
Tecnosystemi SpA reserves the right to make changes at any time and without notice, for technical or commercial needs.